

SEIKO METRONOME

SPM320/370

INSTRUCTION MANUAL


Thank you for purchasing SEIKO METRONOME SPM320/370. Before using the metronome, please read the instructions in this manual carefully for proper use and care. Please keep this manual handy for ready reference.

■ FOR SAFE OPERATION

CAUTION

- Do not remove the pendulum weight from the pendulum, as a child may swallow it.
- While the metronome is out of use, be sure to fix the pendulum to the pendulum support, as the tip of the pendulum may cause injury.
- Do not leave the metronome unstable on a high shelf or the like. If it drops, it may break, and the fragments of the broken case may cause injury.

■ PARTS OF YOUR METRONOME

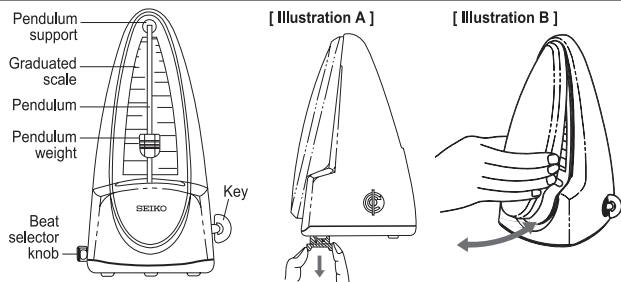

■ HOW TO USE

- 1) After taking the metronome out of the box, remove the stopper from the bottom of the body in such a manner as shown in Illustration "A". (The stopper protects the pendulum from any shocks during shipping)
- 2) Hold the lower portion of the cover, and pull it toward you to remove it. (See Illustration "B")
- 3) Turn the key clockwise until the spring is fully wound up. Then, place the metronome on a level surface.
- 4) Set the tempo.
 - Slide the tip of the pendulum to the right to release it from the pendulum support.
 - Move the pendulum weight up or down to set its top to the desired number of tempos on the graduated scale.
 - * To set the tempo to "M.M. ♩ = 72" indicated in the musical score, set the top of the weight to "72".
- 5) To set the beat, set the beat selector knob to "2", "3", "4" or "6". The metronome rings at the first stroke of duple, triple, quadruple or sextuple time, respectively.
 - * To silence the beat sound, set the knob to "0".
- 6) Check that the metronome is placed level, and move the pendulum gently sideways to start the pendulum movement.

■ PRECAUTIONS FOR USING THE METRONOME

- Do not place or use the metronome in dirty or humid places.
- After using the metronome, be sure to fix the pendulum to the pendulum support, and close the cover.
 - * To close the cover, set the upper portion of the cover to the metronome body and push its lower portion until it clicks into position. (See illustration "B")
- Do not leave the metronome unstable on a high shelf or the like. If it drops, a malfunction will result.
- Do not expose the metronome to direct sunlight, as this will discolor and deform it.
- To clean the metronome, wipe it with a cloth dipped in a solution of neutral detergent. Do not use volatile solvents such as paint thinner or benzene.

If the metronome does not operate, please consult the retailer from whom it was purchased.